



Occupational safety Riga Port

Entrance/exit in the Port Area

- Before entering the Port Area, please obtain a pass presenting an identity document and a technical passport for the vehicle;
- You will be allowed entrance to/exited from the Port Area upon presentation of a single-use or permanent pass;
- When visiting the Port Area, stay with your escort.

Safety in the Port Area

In the Port Area, follow all instructions given and ask for permission to take photos or videos.



Safety in the Port Area

- When moving around, please observe the traffic and safety signs posted;
- When driving in the Port Area, the maximum speed limit is 30km/h and special care must be taken when crossing the railway;
- In the Port Area, port machinery has priority in work areas where cargo is being handled and the maximum speed limit for vehicles is 5 km/h.



Safety in the Port Area

PARTICULARLY DANGEROUS AND PROHIBITED:

- Climb over and under carriages and over carriage couplings;
- Stay in the working area of cranes, mobile machinery or other equipment, under lifted loads;
- Enter the area of possible movement of equipment and machinery when they are in operation, not switched off and unlocked;
- Be closer than 1.5 m to the edge of a berth



Safety in the Port Area

- When carrying out work in the Port Area, staying only in the designated work area is allowed;
- Your employer - the subcontractor - is responsible for your safety clothing, equipment, safety signs and their location;
- Always wear reflective work clothing and safety equipment;
- If you notice anything that seems unsafe, please inform your line manager immediately.



Safety in the Port Area

PLEASE KEEP IN MIND:

- Smoking in the Port Area is only allowed in specially equipped smoking areas, including those marked with a «Smēķēšanas vieta» (Smoking area) sign;
- On hearing the alarm sound, immediately cease all activities and proceed towards the exit of the Port Area and assemble at the places indicated by the «Pulcēšanās vieta» (Assembly Place) sign.



In case of emergency, call:



- State Fire and Rescue Service at **112**;
 - Port Dispatcher
 - Export Area – **22 314 134**
 - Krievu sala – **26 385 463**



SAFETY starts with you!

You are SAFETY!